



INSTRUCTIONS
360 Y-DROP[®]
NARROW ROW
CONVERSION KIT

INSTRUCTIONS

360 Y-DROP

NARROW ROW

CONVERSION KIT



Figure 1 - 360 Y-DROP Narrow Row Conversion Kit

⊕ RECOMMENDED TOOLS

- + #2 Phillips Screw Driver
- + 15/16" Socket
- + Pliers
- + Utility Knife

⊕ QUESTIONS

- + Call our Product Support team at 888-512-4890

I. REMOVE CURRENT LEG ASSEMBLIES

Figure 2

- Step 1** Remove the Y-connector (1).
- Step 2** Remove lower pins (2).
- Step 3** Remove nuts (3).
- Step 4** Cut hoses (4) at least 1.5" back from the end of the connector.

Figure 3

- Step 5** Remove the 12 Philips screws (5).

Figure 4

- Step 6** Remove the bottom cover (6).

Figures 4 and 5

- Step 7** Remove and retain the two stainless steel sleeves (7).

Figure 5

- Step 8** Remove the left and right standard width legs (8) with the hose assembly.



Figure 2



Figure 3

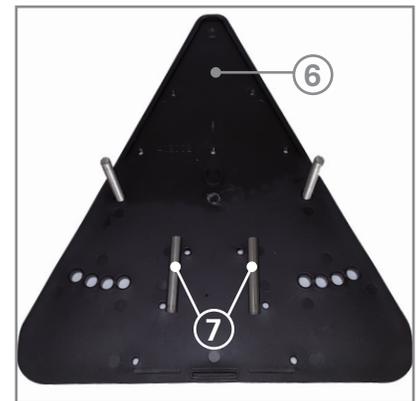


Figure 4

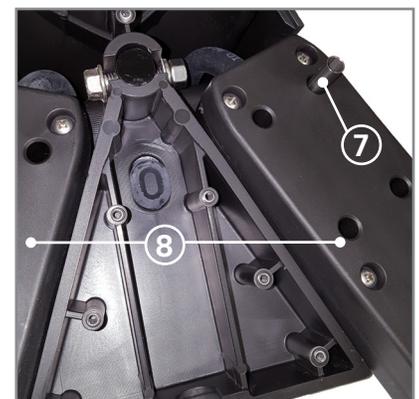


Figure 5

II. INSTALL NARROW LEG ASSEMBLIES

Figure 6

Step 1 Place the Left and Right narrow leg assemblies (9) on the base unit.

Step 2 Route the hose assemblies through the top of the base unit.

Step 3 Reinstall stainless steel sleeves (7).

Figure 7

Step 4 Reinstall the bottom cover (6).

Step 5 Reinstall the flange bolts (10).

Figure 8

Step 6 Reinstall nuts (3) and tighten until the top of the base is seated against the leg and can still freely rotate.

Figure 9

Step 6 Install the supplied 12 screws.

WARNING: Install screws by hand. Use of drills and impacts could result in stripping out the threads.

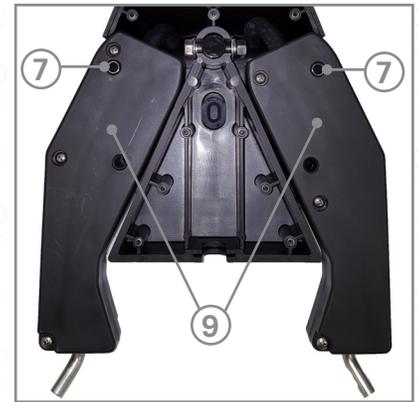


Figure 6



Figure 7



Figure 8



Figure 9

III. REMOVING THE OETIKER CLAMP

Figures 10 and 11

Step 1 Straighten the tab (11) in order to allow the flap (12) to be opened.

Figure 11

Step 2 Pry open the flap and remove the clamp (13).

Figure 12

Step 3 Cut the hose lengthwise (14).

NOTE: use extreme caution when making the cut. Gloves and eye protection should be used.

Figure 13

Step 4 Repeat steps 1-4 for the Quick Connect Fitting.

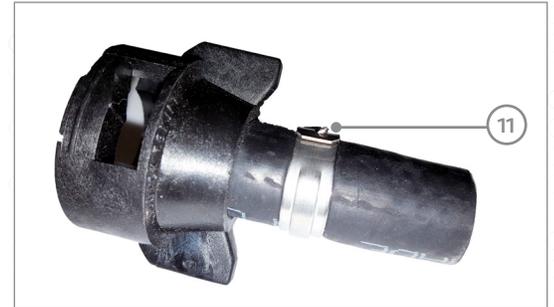


Figure 10

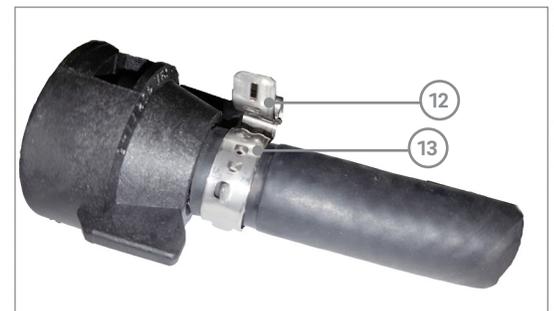


Figure 11



Figure 12



Figure 13

IV. REINSTALLING THE QUICK CONNECT FITTINGS AND Y-CONNECTOR

Figure 14

Step 1 Install the barbed fittings (15) on the hose assemblies (16).

Step 2 Install the supplied clamps (17).

NOTE: Be sure to reinstall the rubber washers inside the quick connect fitting.

Figure 15

Step 3 Reinstall the Y-Connector (1).

Figure 16

Step 4 Trim the outside of the bottom plate to match the profile of the narrow leg (18).



Figure 14



Figure 15



Figure 16

+ NARROW ROW CONVERSION KIT
INSTALLATION COMPLETE.

